

The Memory Hierarchy



Today


- Storage technologies and trends
- Locality of reference
- Caching in the memory hierarchy

Next time

- Cache memory

Random-Access Memory (RAM)

- Computer technology success due in big part to progress in storage technology
 - It is packaged as a chip
 - Basic storage unit is a cell (one bit per cell).
 - Multiple RAM chips form a memory
 - Random-Access Memory – RAM comes in two flavors *static* and *dynamic*

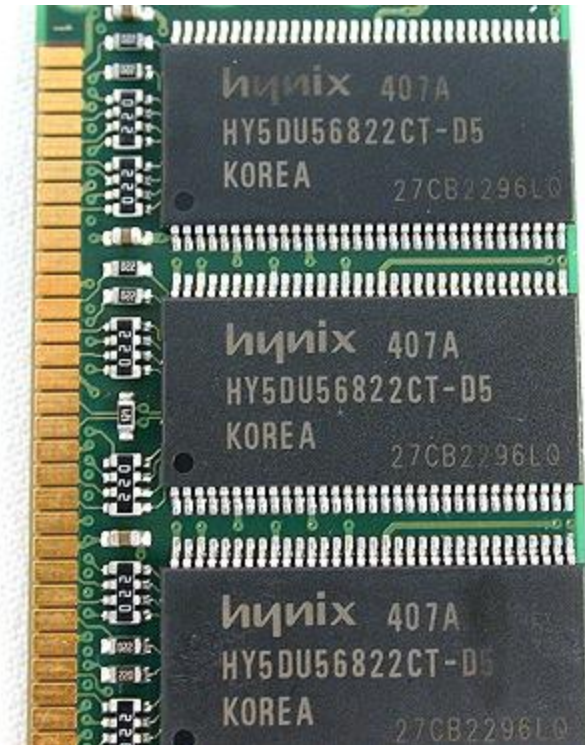


Static and Dynamic RAMs

- **Static RAM (SRAM)**
 - Each cell stores bit with a six-transistor circuit
 - Retains value indefinitely, as long as it is kept powered
 - Relatively insensitive to disturbances such as electrical noise
 - Faster and more expensive than DRAM
- **Dynamic RAM (DRAM)**
 - Each cell stores bit with a capacitor and transistor
 - Value must be refreshed every 10-100 ms
 - Sensitive to disturbances
 - Slower and cheaper than SRAM

	Tran. Per bit	Acc time	Persist?	Sensitive?	Cost	Applications
SRAM	6	1X	Yes	No	100X	Cache mem.
DRAM	1	10X	No	Yes	1X	Main mem., frame buffers


Conventional DRAM organization

- Cell in a DRAM chip partitioned into supercells
 - Each of w DRAM cells
 - A $d \times w$ DRAM: Stores $d \cdot w$ bits

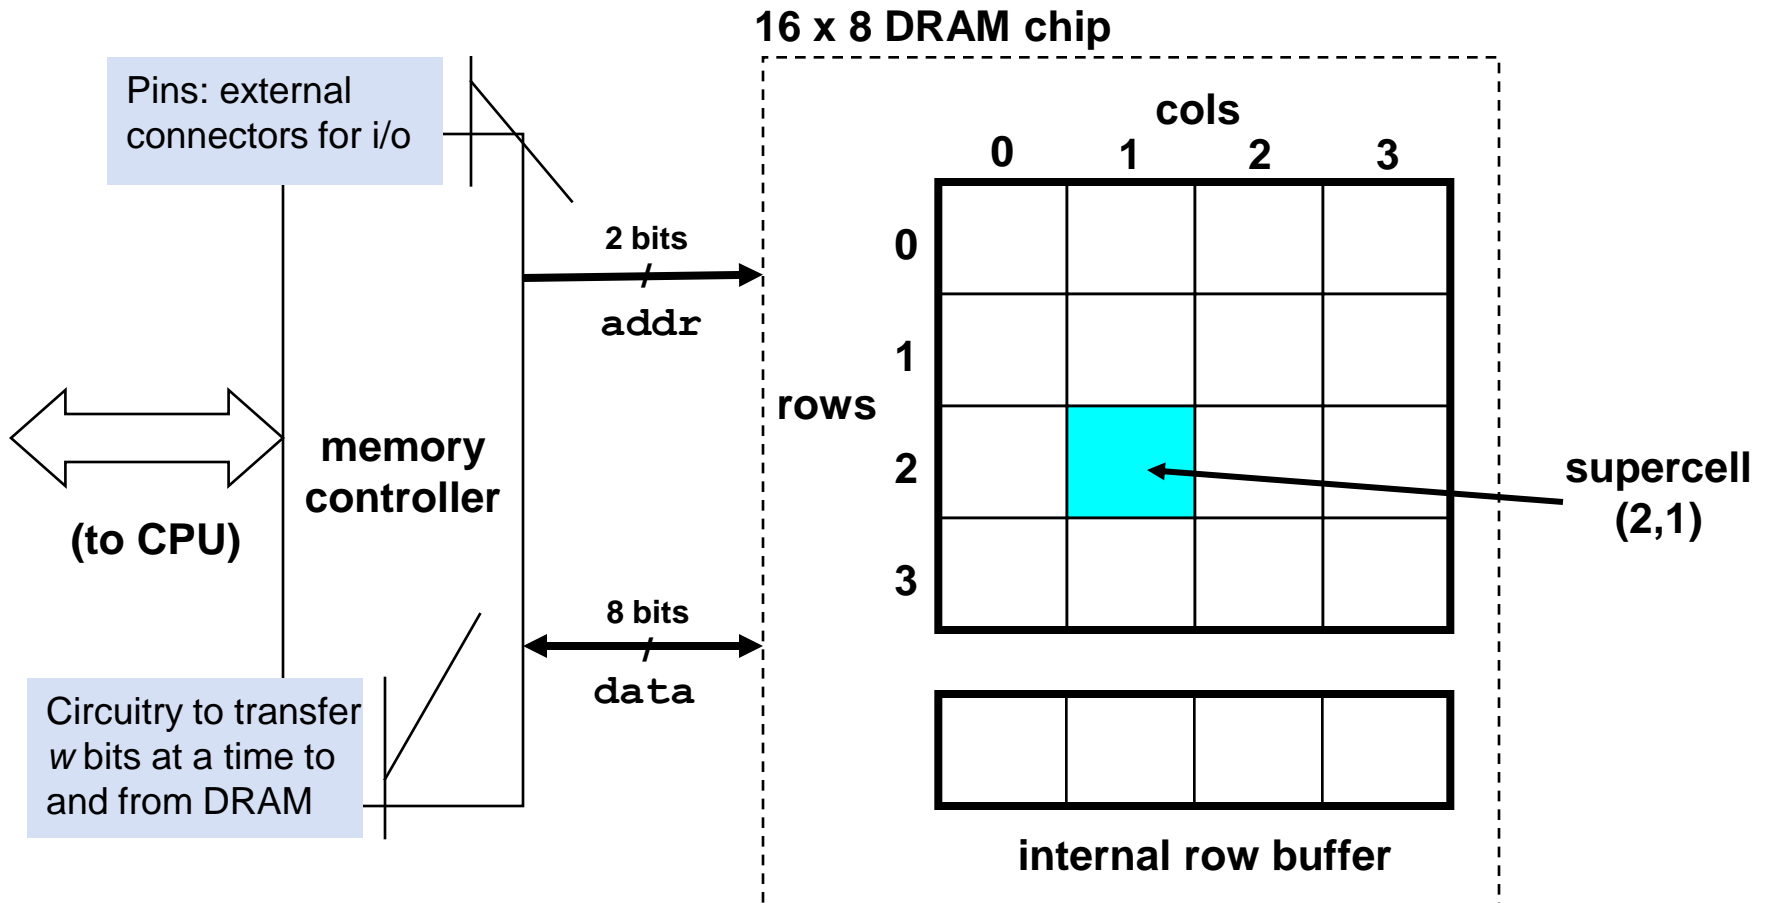

Reading DRAM supercell (2,1)


- Access done in two steps
 - Step 1(a): Row access strobe (**RAS**) selects row 2.
 - Step 1(b): Row 2 copied from DRAM array to row buffer.

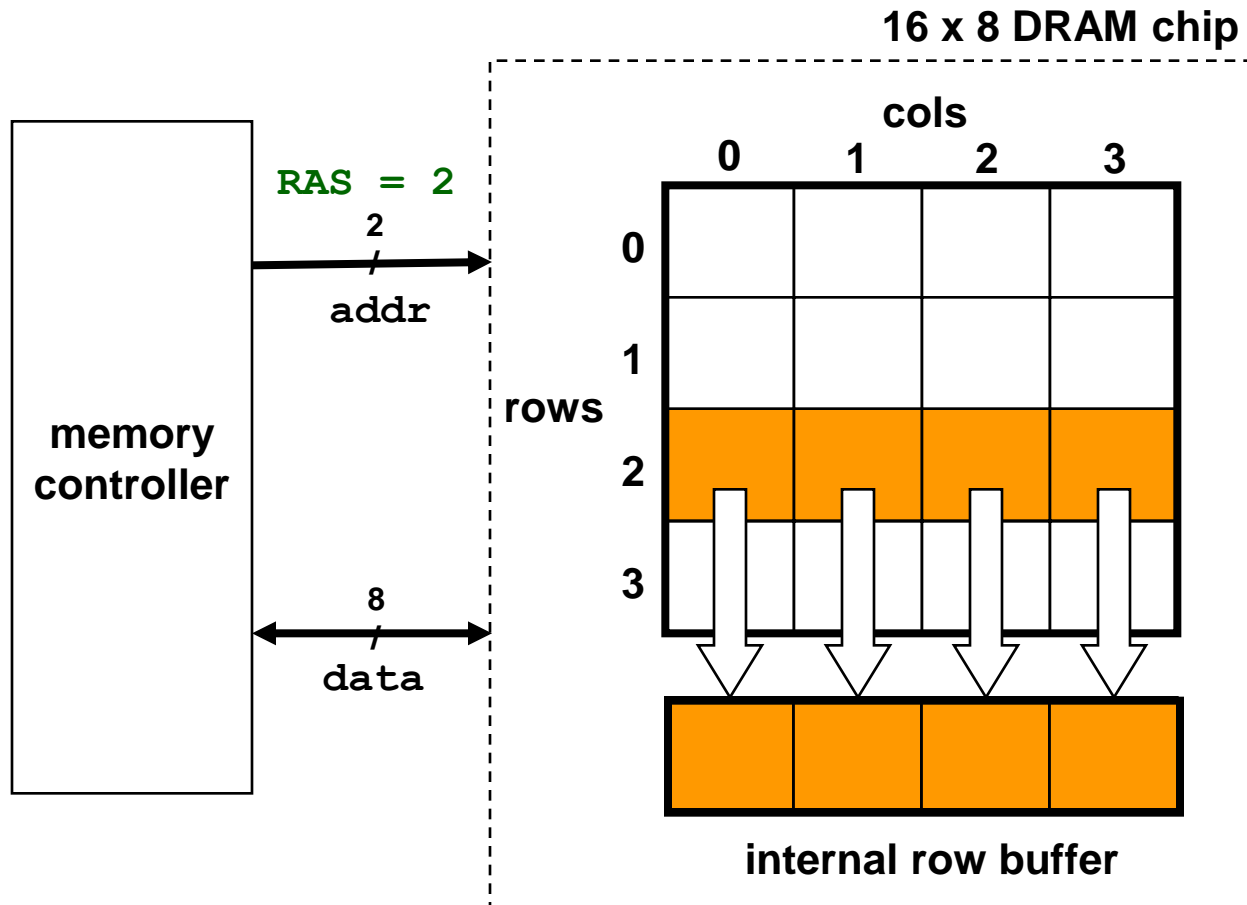

Reading DRAM supercell (2,1)

• ...

- Step 2(a): Column access strobe (**CAS**) selects col 1.
- Step 2(b): Supercell (2,1) copy rom buffer to data lines, and eventually back to the CPU.

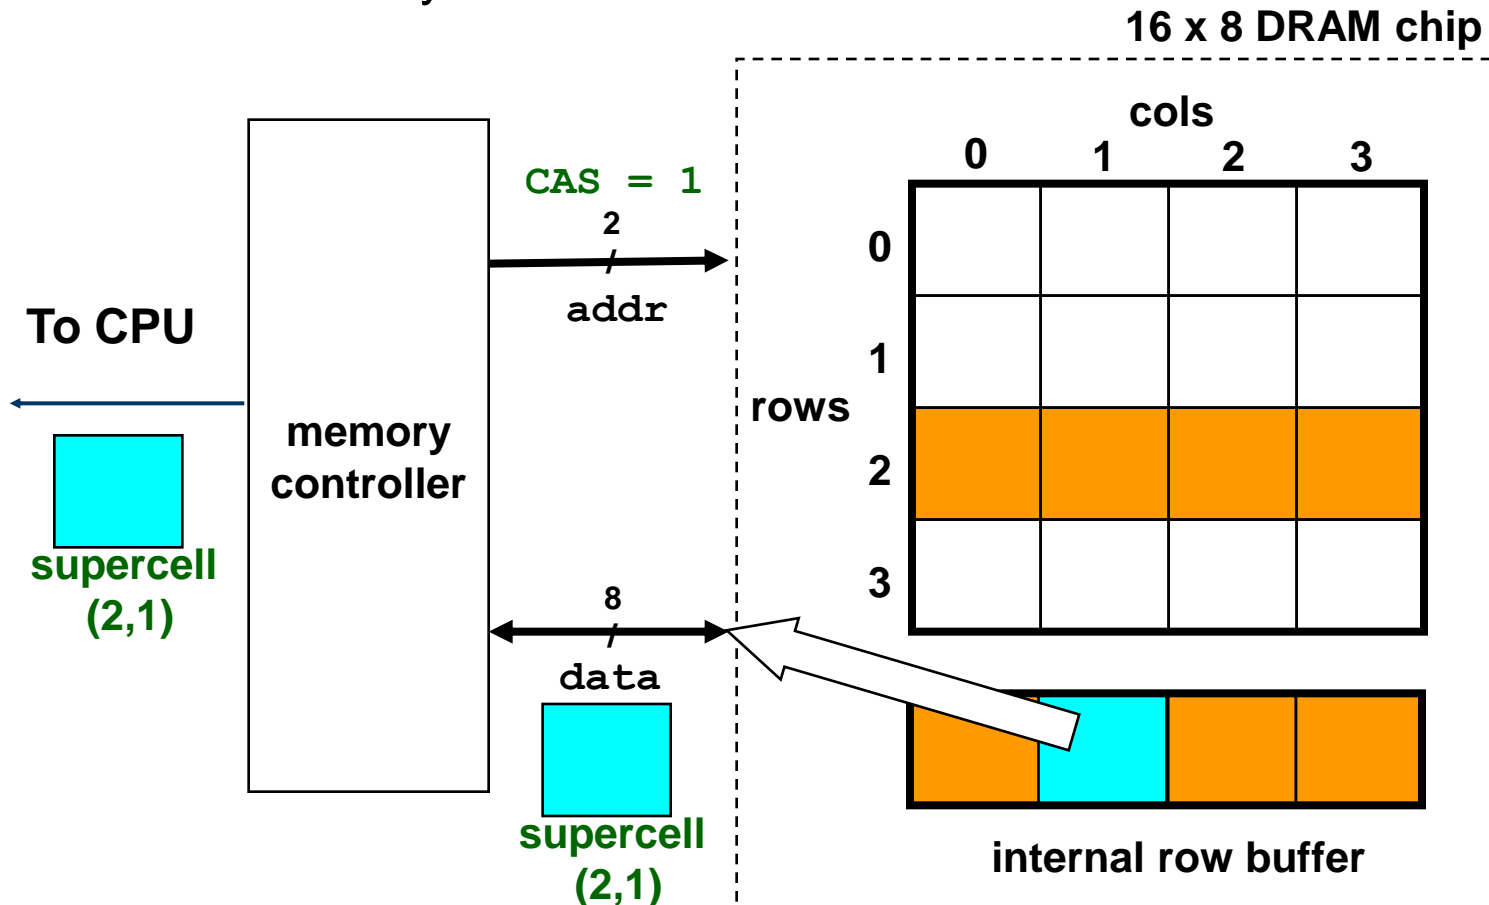


Memory modules

- DRAM chips are packaged in memory modules
- Mem. modules plug into expansion slots on main system board
 - Examples
 - 168-pin Dual Inline Memory Module (DIMM) – transfer data in 64-bit chunks
 - 72-pin Single Inline Memory Module (SIMM) – transfer data in 32-bit chunks



Memory module basic idea

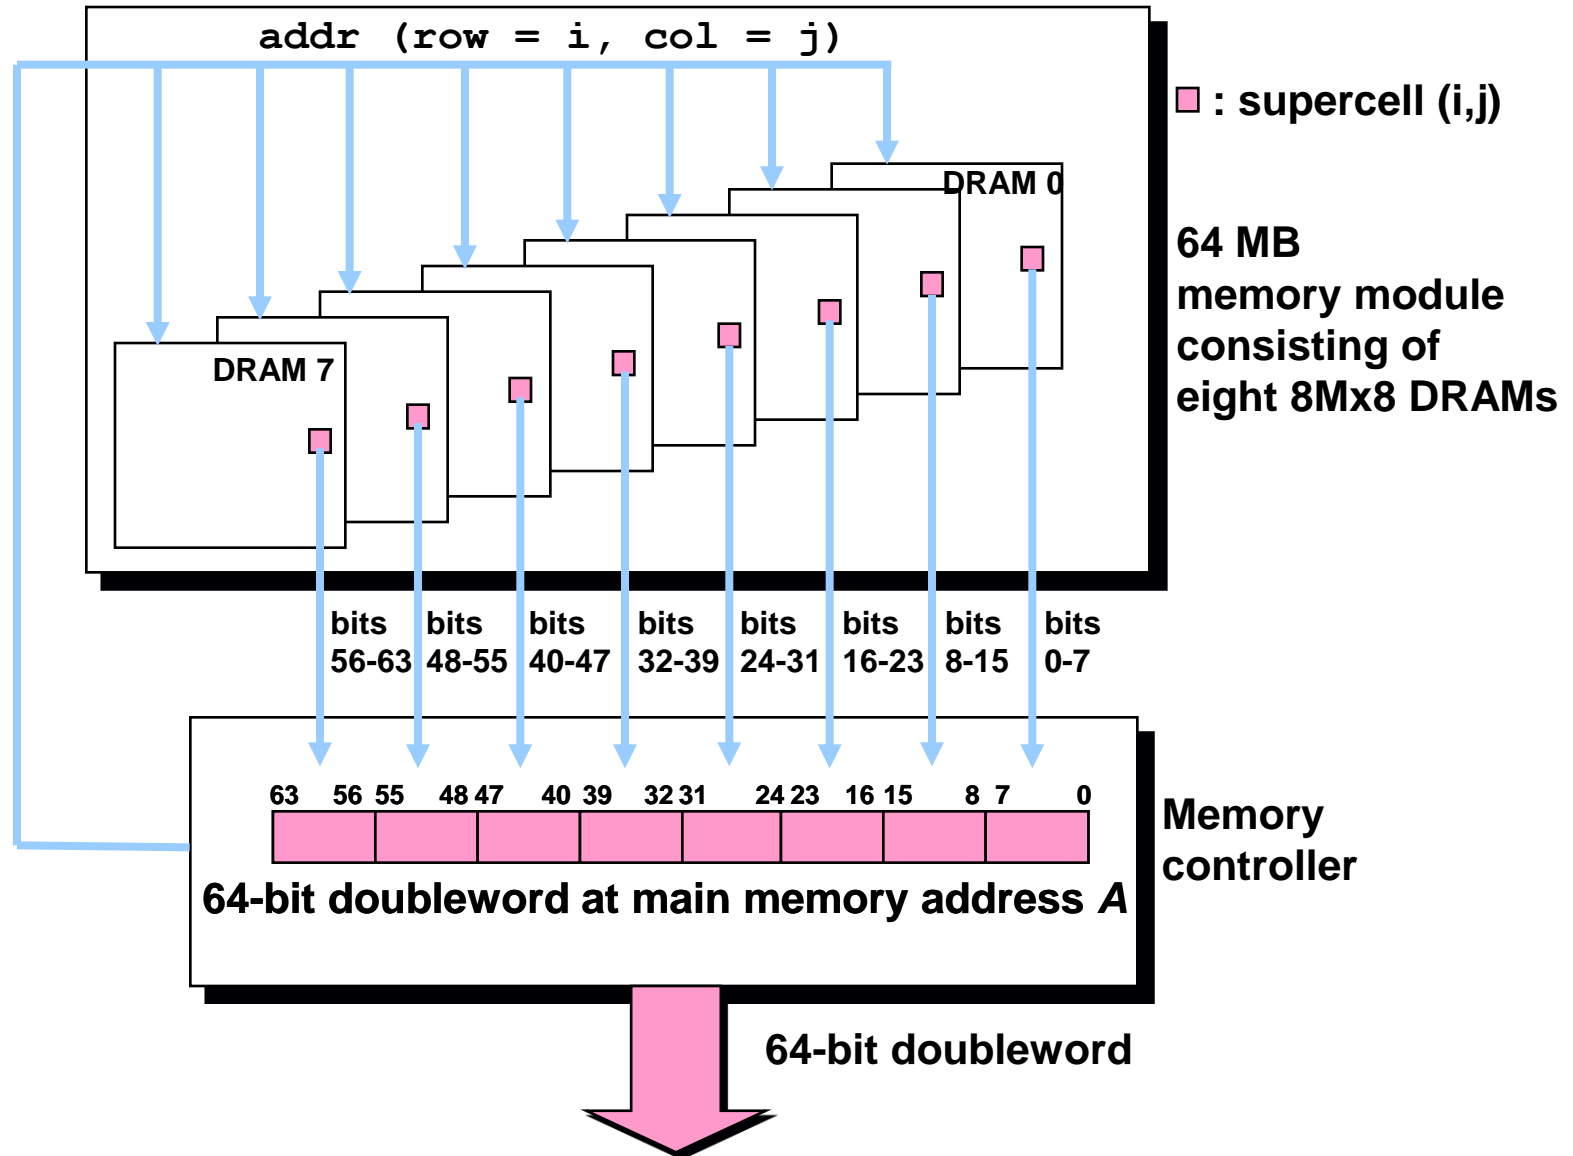

Enhanced DRAMs

- All enhanced DRAMs are built around the conventional DRAM core.
 - Fast page mode DRAM (**FPM DRAM**)
 - Access contents of row with [RAS, CAS, CAS, CAS, CAS] instead of [(RAS,CAS), (RAS,CAS), (RAS,CAS), (RAS,CAS)].
 - Extended data out DRAM (**EDO DRAM**)
 - Enhanced FPM DRAM with more closely spaced CAS signals.
 - Synchronous DRAM (**SDRAM**)
 - Driven with rising clock edge instead of asynchronous control signals.
 - Double data-rate synchronous DRAM (**DDR SDRAM**)
 - Enhancement of SDRAM that uses both clock edges as control signals.
 - Video RAM (**VRAM**)
 - Like FPM DRAM, but output is produced by shifting row buffer
 - Dual ported (allows concurrent reads and writes)


Nonvolatile memories

- DRAM and SRAM are volatile memories
 - Lose information if powered off.
- Nonvolatile memories retain value even if powered off.
 - Generic name is read-only memory (ROM).
 - Misleading because some ROMs can be read and modified.
- Types of ROMs
 - Programmable ROM (PROM)
 - Erasable Programmable ROM (EPROM)
 - Electrically Erasable PROM (EEPROM)
 - Flash memory
- Firmware
 - Program stored in a ROM
 - Boot time code, BIOS (basic input/output system)
 - graphics cards, disk controllers.

Accessing main memory


- Data flows between main mem. and CPU over buses
 - A **bus** is a collection of parallel wires that carry address, data, and control signals.
 - Buses are typically shared by multiple devices.

Example configuration

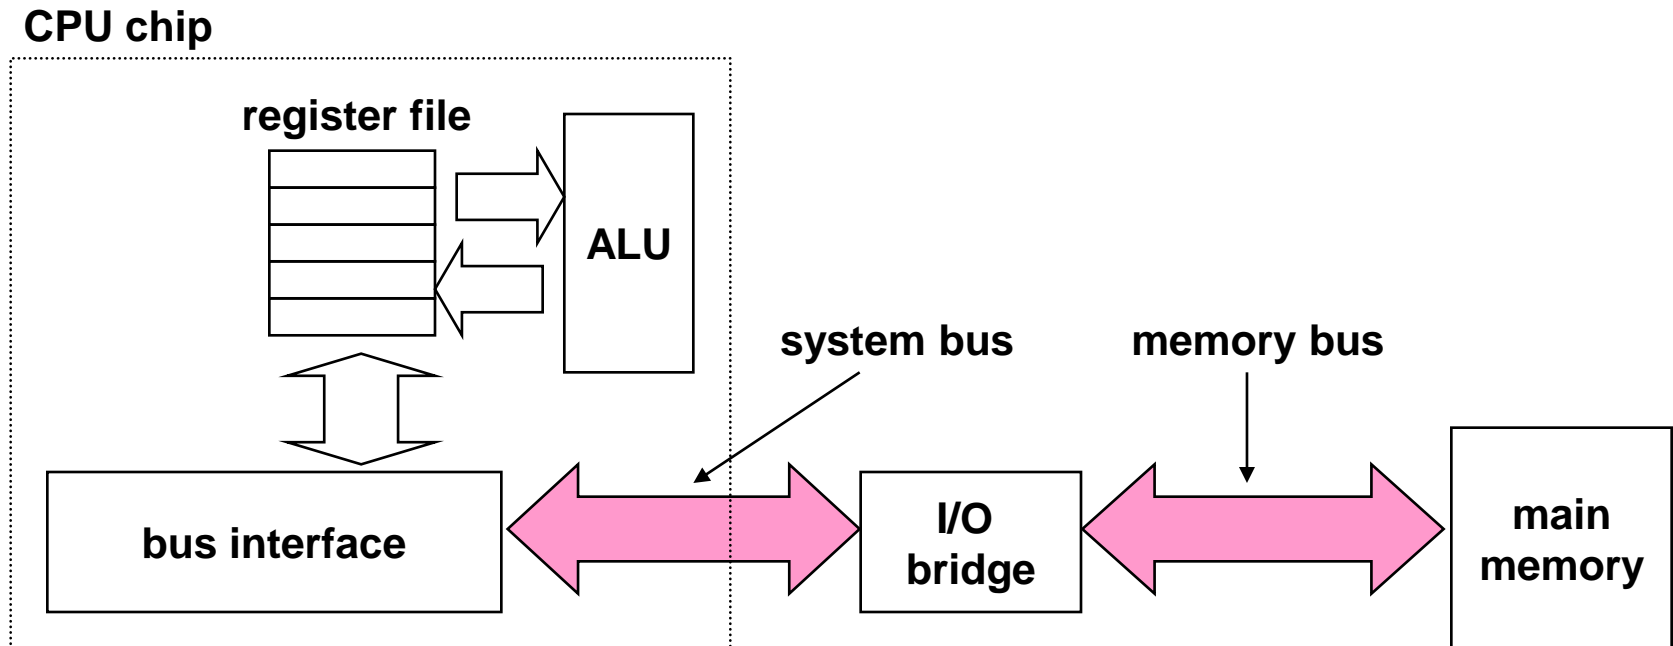


Memory read transaction (1)

- Load content of address A into a register
- CPU places address A on the system bus, I/O bridge passes it on to the memory bus.

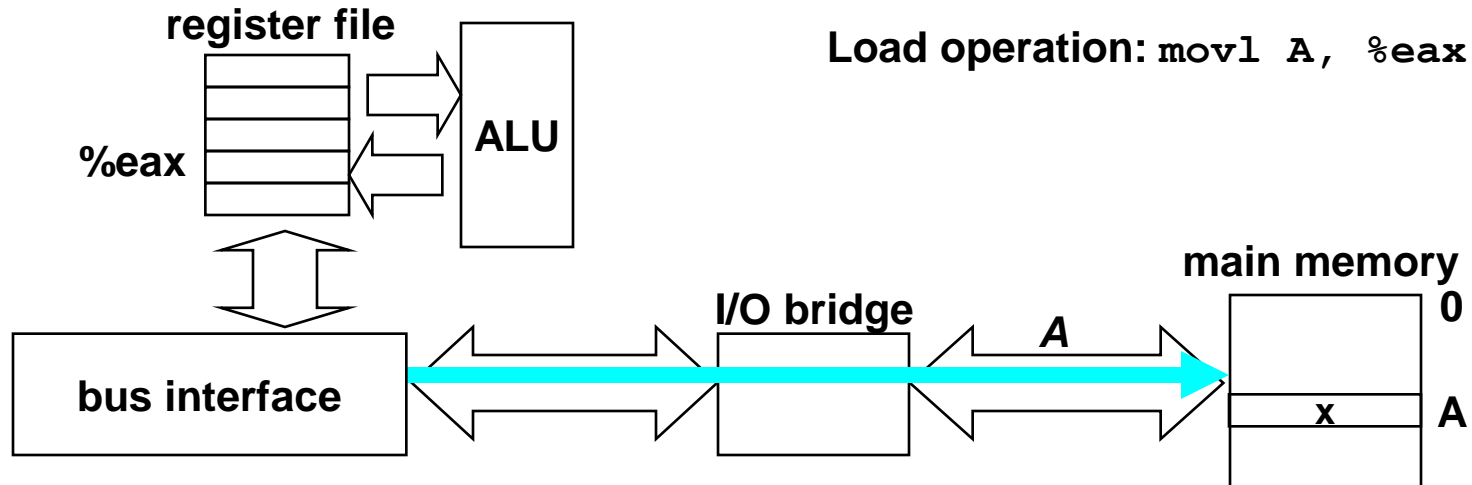


Memory read transaction (2)

- Main memory reads A from the memory bus, retrieves word x, and places it on the bus; I/O bridge passes it along to the system bus

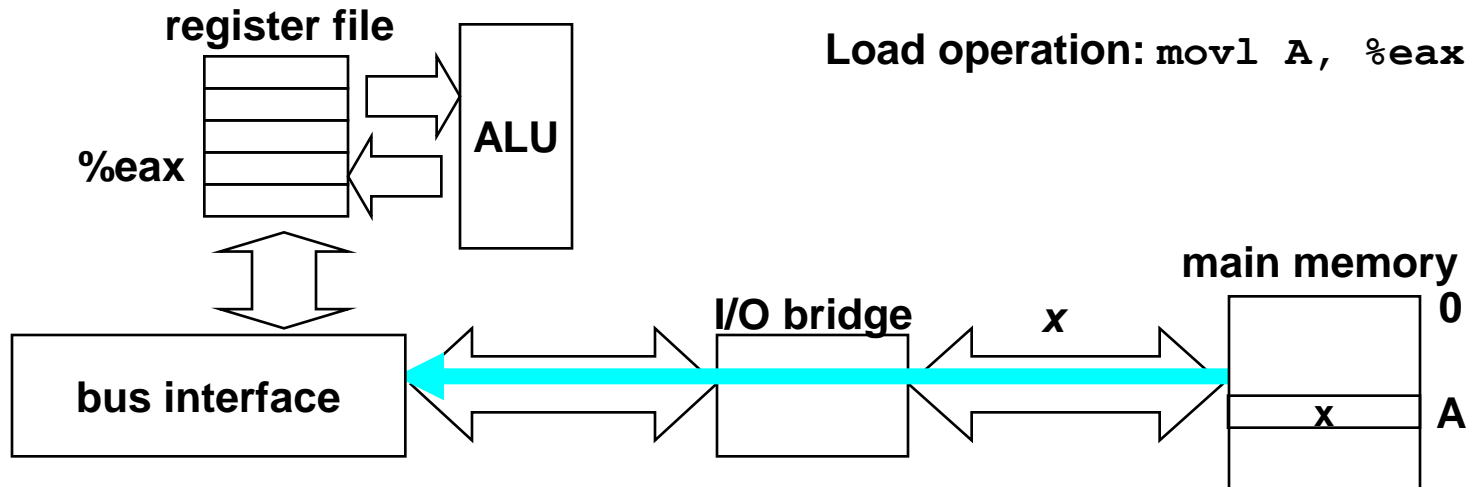


Memory read transaction (3)

- CPU read word x from the bus and copies it into register `%eax`.

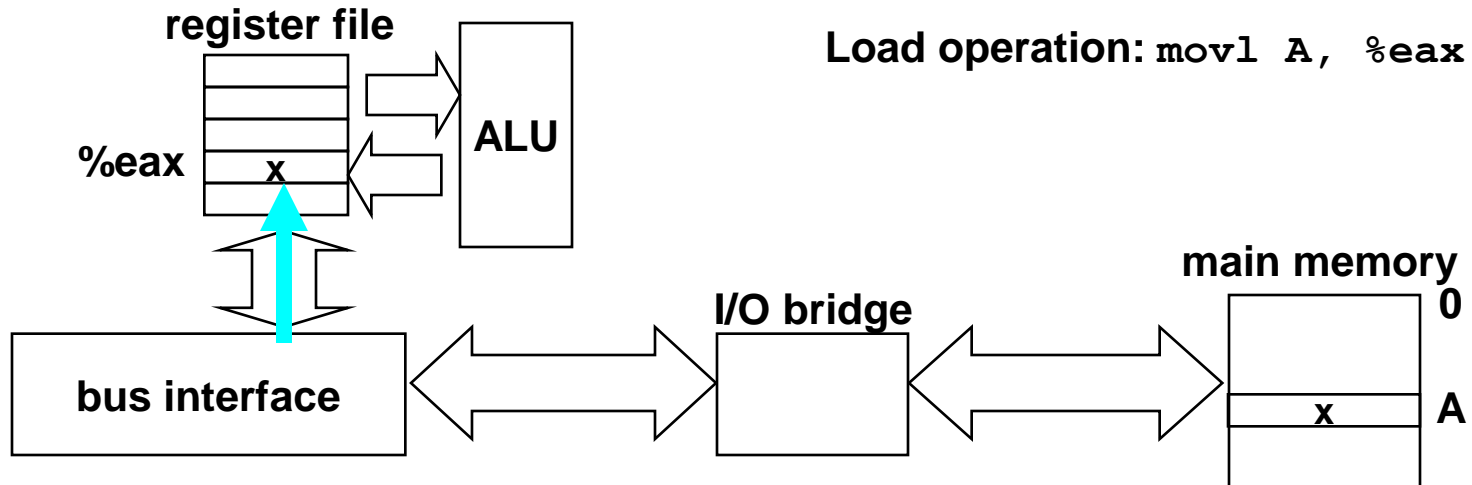


Memory write transaction (1)

- Similar for store; CPU places address A on bus. Main memory reads it and waits for the corresponding data word to arrive.

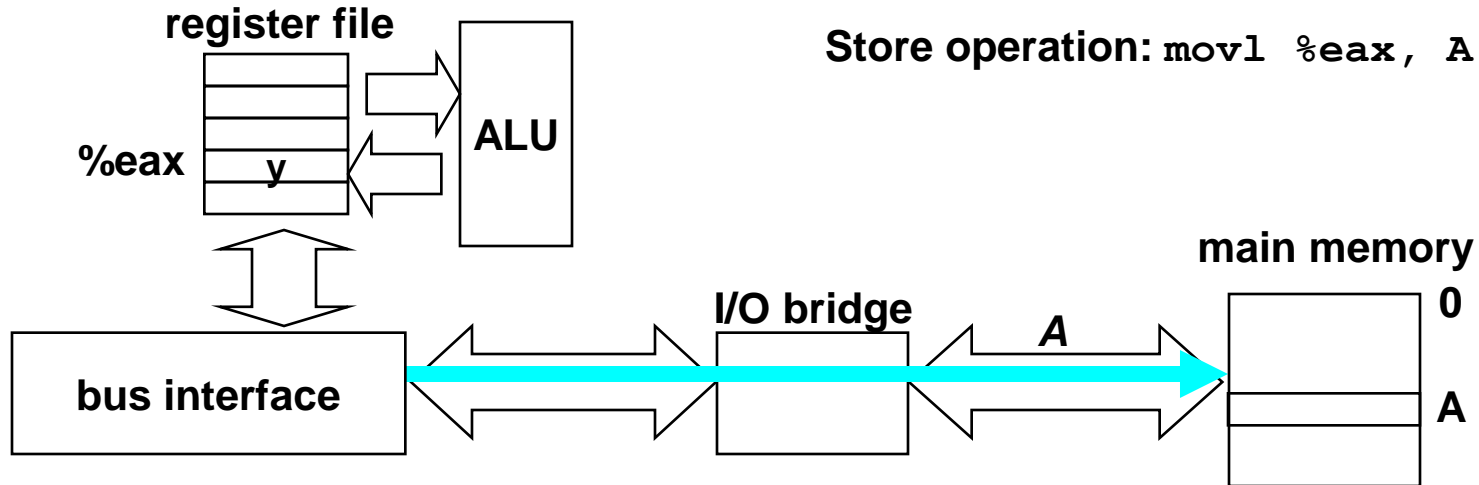


Memory write transaction (2)

- CPU places data word y on the bus.

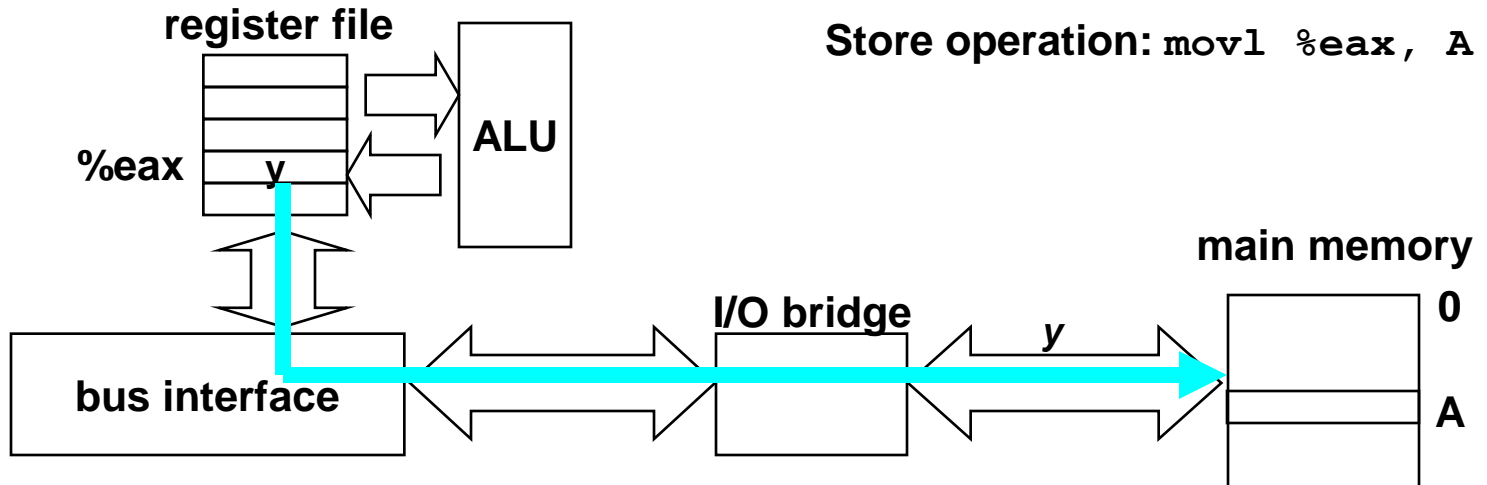

Memory write transaction (3)

- Main memory read data word y from the bus and stores it at address A .

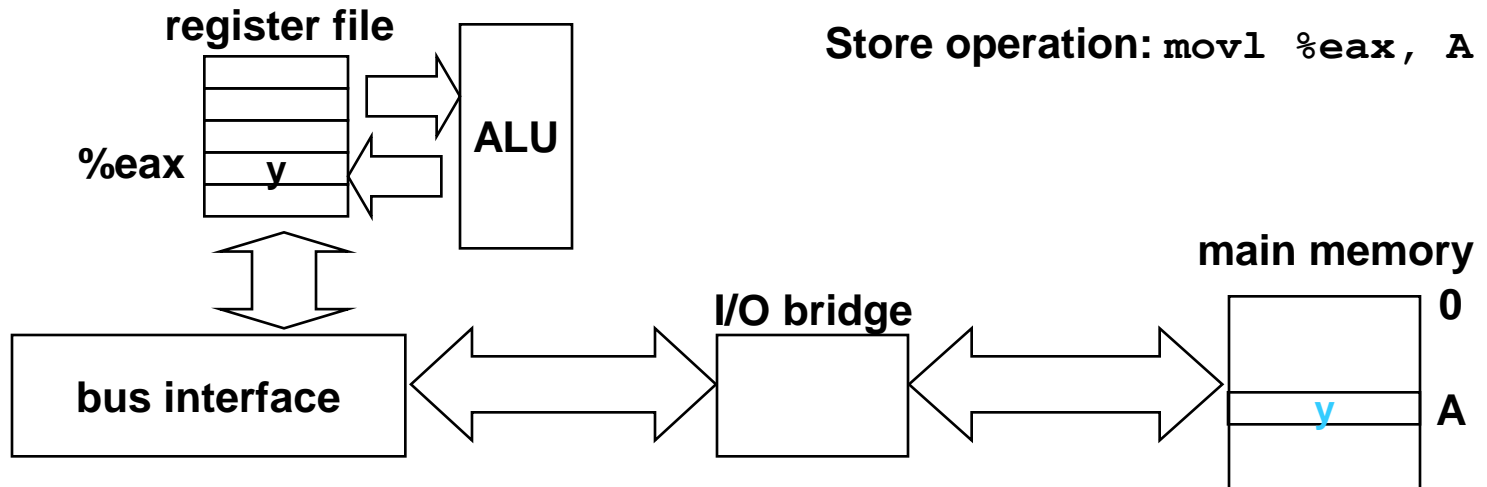

Disk storage

- Workhorse storage devices
 - 100-1,000x GB
 - Milliseconds to read (100,000x longer than from DRAM, 1,000,000x longer than from SRAM)

IBM 350 Disk Storage Unit
Announced Sep. 4, 1956
5MB




Seagate Barracuda XT
2TB, 2010




Disk geometry

- Disks consist of **platters**, each with two **surfaces**.
- Each surface consists of concentric rings called **tracks**.
- Each track consists of **sectors** separated by **gaps**.
- Sectors contain equal # of data bits (typically 512B)

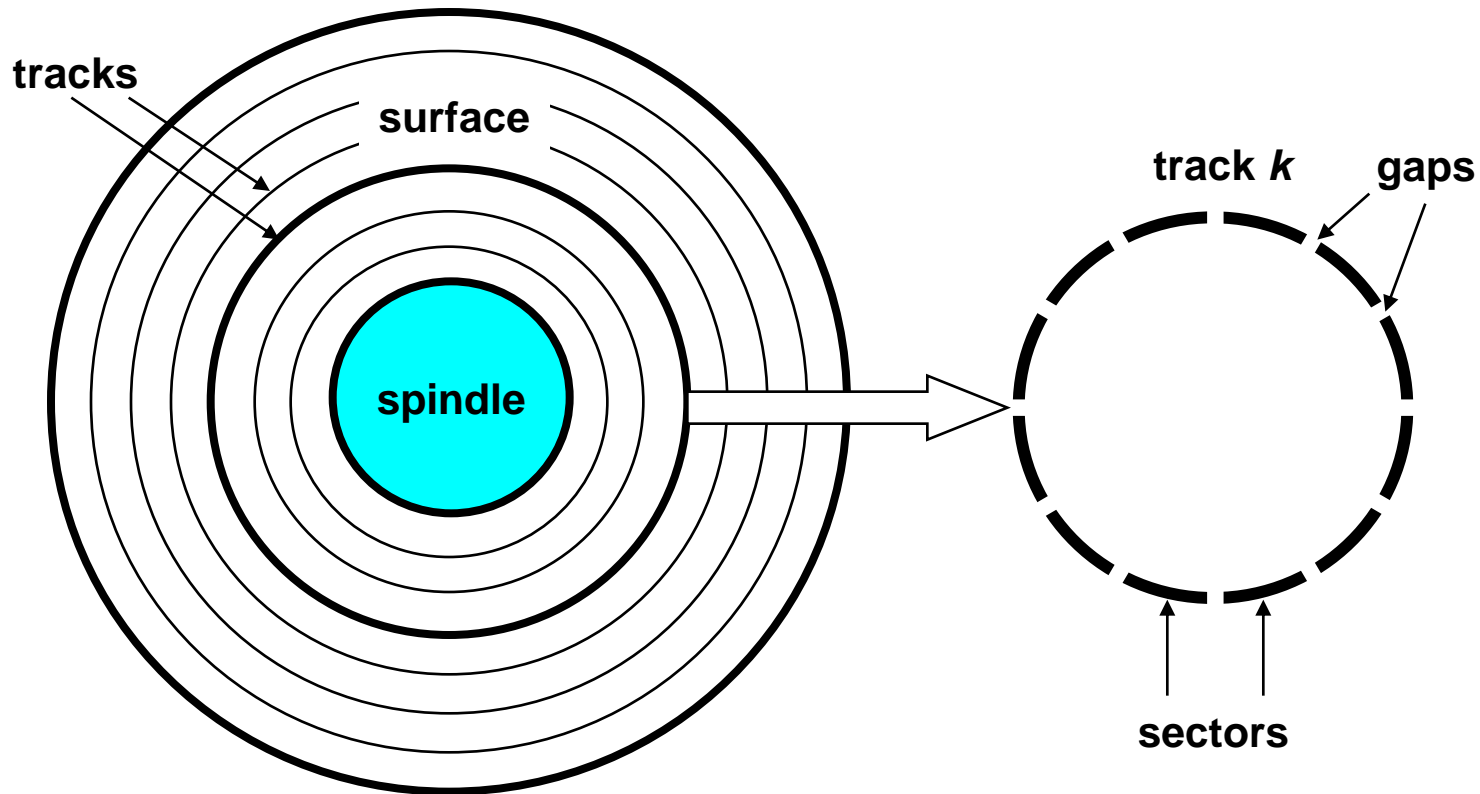

Disk geometry (Multiple-platter view)

- Aligned tracks form a cylinder.

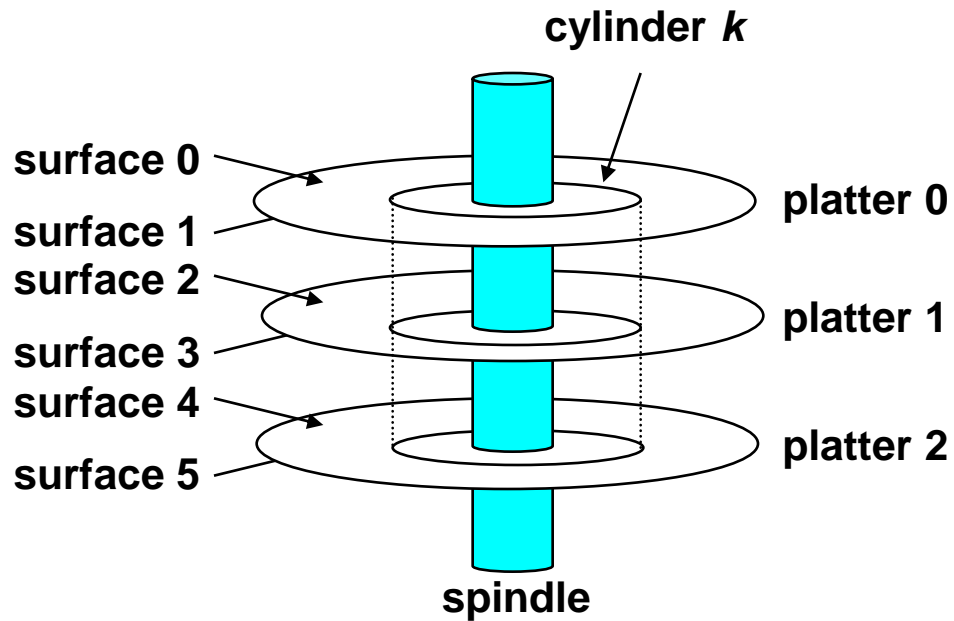

Disk capacity


- *Capacity*: maximum number of bits that can be stored.
 - Vendors express capacity in units of gigabytes (GB), where $1 \text{ GB} = 10^9$.
- Capacity is determined by these technology factors:
 - *Recording density* (bits/in): number of bits that can be squeezed into a 1 inch segment of a track.
 - *Track density* (tracks/in): number of tracks that can be squeezed into a 1 inch radial segment.
 - *Areal density* (bits/in²): recording density * track density.
- Modern disks partition tracks into disjoint subsets called recording zones
 - Each track in a zone has the same number of sectors, determined by the circumference of innermost track.
 - Each zone has a different number of sectors/track

Computing disk capacity

- Capacity = (# bytes/sector) x (avg. # sectors/track) x (# tracks/surface) x (# surfaces/platter) x (# platters/disk)
- Example:
 - 512 bytes/sector
 - 300 sectors/track (on average)
 - 20,000 tracks/surface
 - 2 surfaces/platter
 - 5 platters/disk
- Capacity = $512 \times 300 \times 20000 \times 2 \times 5 = 30,720,000,000 = 30.72 \text{ GB}$


Disk operation (Single-platter view)

The disk surface spins at a fixed rotational rate (5400-15000 RPM)

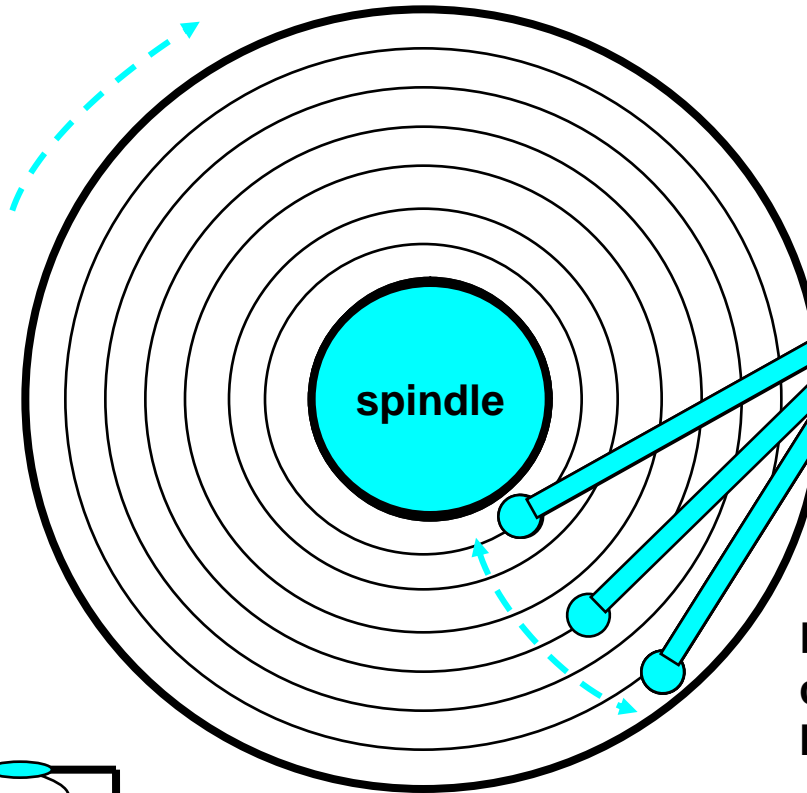

The read/write *head* is attached to the end of the *arm* and flies over the disk surface on a thin cushion of air.

By moving radially, the arm can position the read/write head over any track.

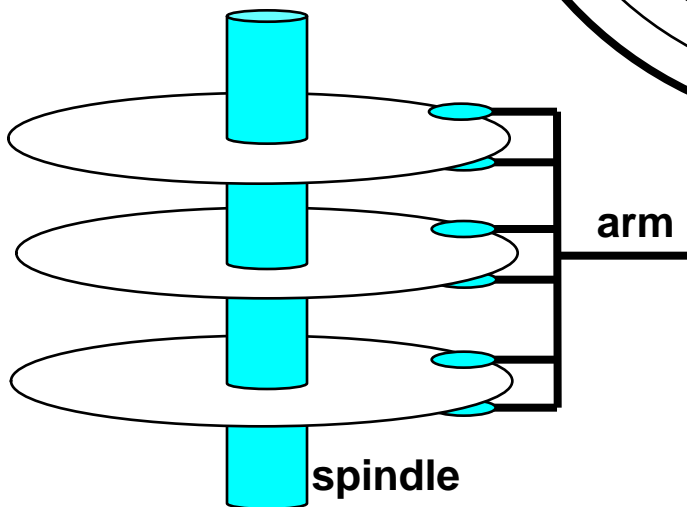

read/write heads move in unison from cylinder to cylinder

Disk access time

- Average time to access some target sector approximated by :
 - $T_{\text{access}} = T_{\text{avg seek}} + T_{\text{avg rotation}} + T_{\text{avg transfer}}$
- Seek time ($T_{\text{avg seek}}$)
 - Time to position heads over cylinder containing target sector.
 - Typical $T_{\text{avg seek}} = 9 \text{ ms}$
- Rotational latency ($T_{\text{avg rotation}}$)
 - Time waiting for first bit of target sector to pass under r/w head.
 - $T_{\text{avg rotation}} = T_{\text{max rotation}}/2 = 1/\text{RPMs} \times 60 \text{ sec}/1 \text{ min} \times 1/2$
- Transfer time ($T_{\text{avg transfer}}$)
 - Time to read the bits in the target sector.
 - $T_{\text{avg transfer}} = 1/\text{RPM} \times 1/(\text{avg \# sectors/track}) \times 60 \text{ secs}/1 \text{ min.}$

Disk access time example

- Given:
 - Rotational rate = 7,200 RPM
 - Average seek time = 9 ms.
 - Avg # sectors/track = 400.
- Derived:
 - $T_{\text{avg rotation}} = 1/2 \times (60 \text{ secs}/7200 \text{ RPM}) \times 1000 \text{ ms/sec} = 4 \text{ ms}.$
 - $T_{\text{avg transfer}} = 60/7200 \text{ RPM} \times 1/400 \text{ sec/track} \times 1000 \text{ ms/sec} = 0.02 \text{ ms}$
 - $T_{\text{access}} = T_{\text{avg seek}} + T_{\text{avg rotation}} + T_{\text{avg transfer}} = 9 \text{ ms} + 4 \text{ ms} + 0.02 \text{ ms}$
- Important points:
 - Access time dominated by seek time and rotational latency.
 - First bit in a sector is the most expensive, the rest are free.
 - SRAM access time is about 4 ns/doubleword, DRAM about 60 ns
 - Disk is about 40,000 times slower than SRAM,
 - 2,500 times slower than DRAM.


Logical disk blocks

- Modern disks present a simpler abstract view of the complex sector geometry
 - Set of available sectors modeled as a sequence of b-sized logical blocks (0, 1, 2, ...)
- Mapping between logical blocks and physical sectors
 - Maintained by hardware/firmware device called disk controller.
 - Converts requests for logical blocks into (surface, track, sector) triples.
- Allows controller to set aside spare cylinders for each zone.
 - Accounts for the difference in “formatted capacity” and “maximum capacity”.


I/O Bus

CPU chip


Modeled on Intel's
Peripheral Component
Interconnect (PCI)

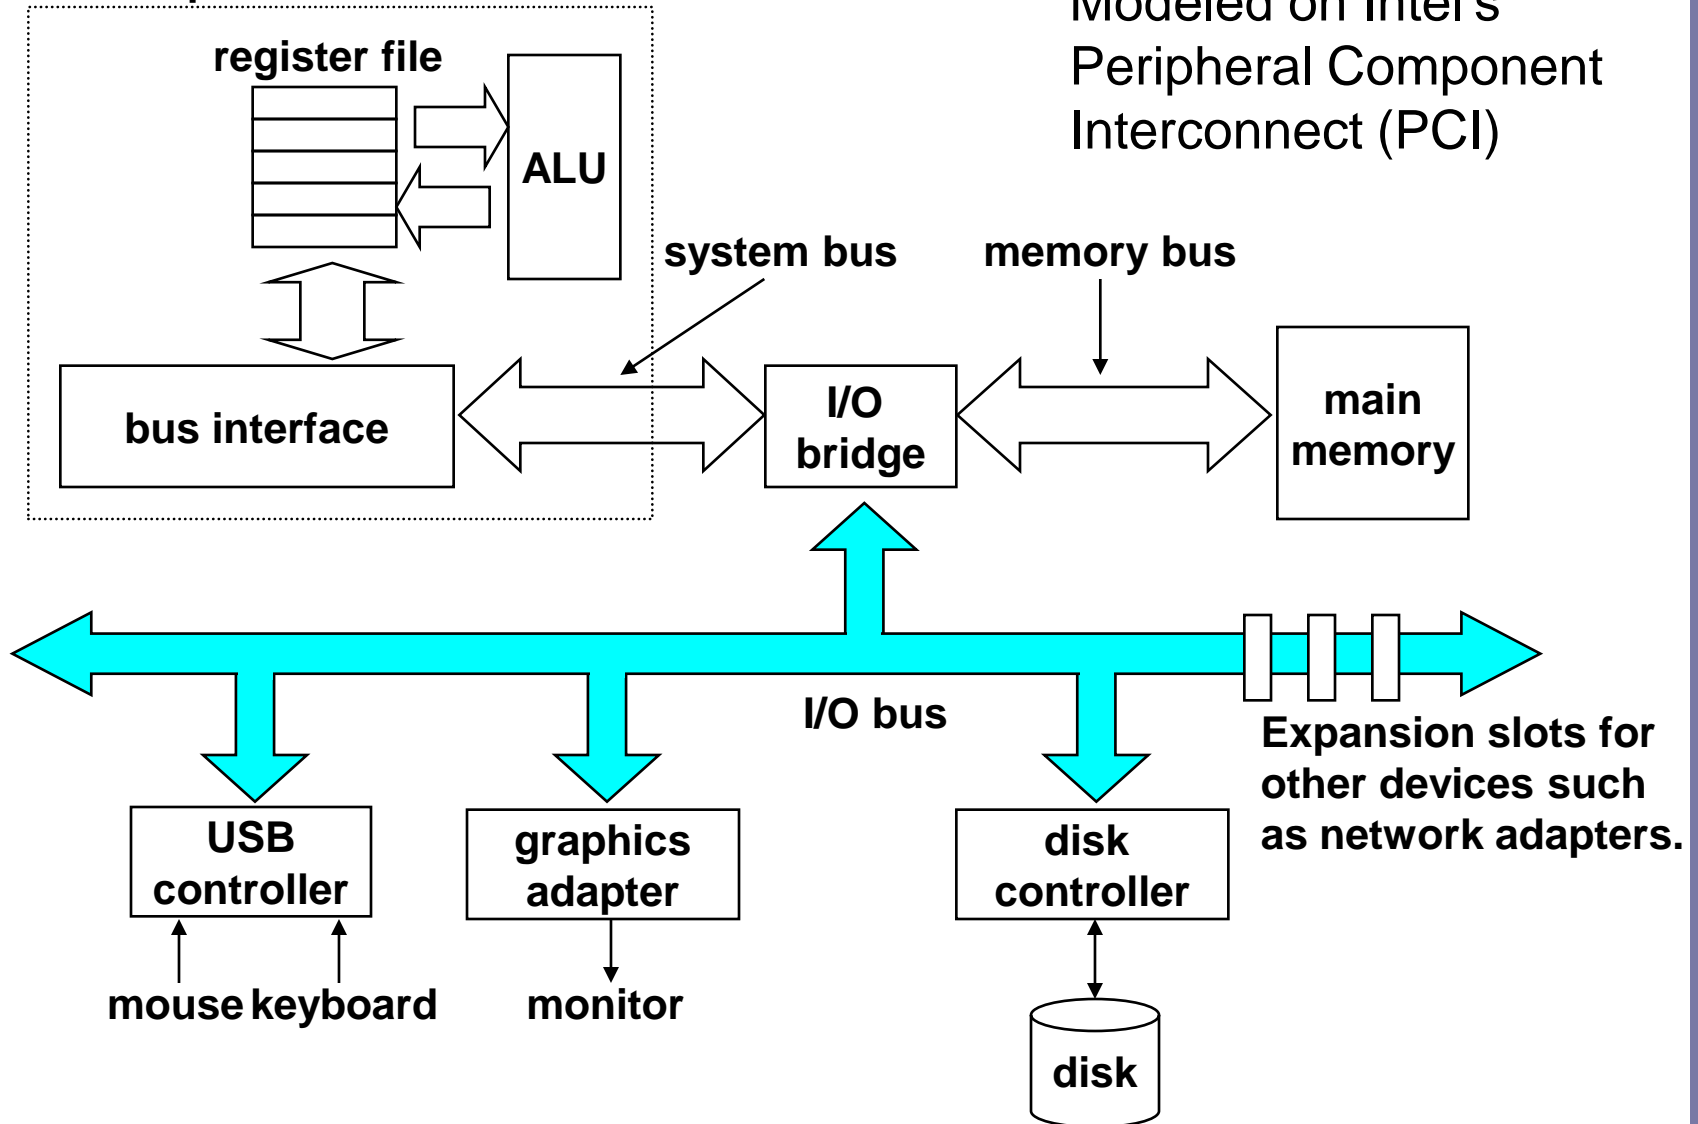


Reading a disk sector (1)

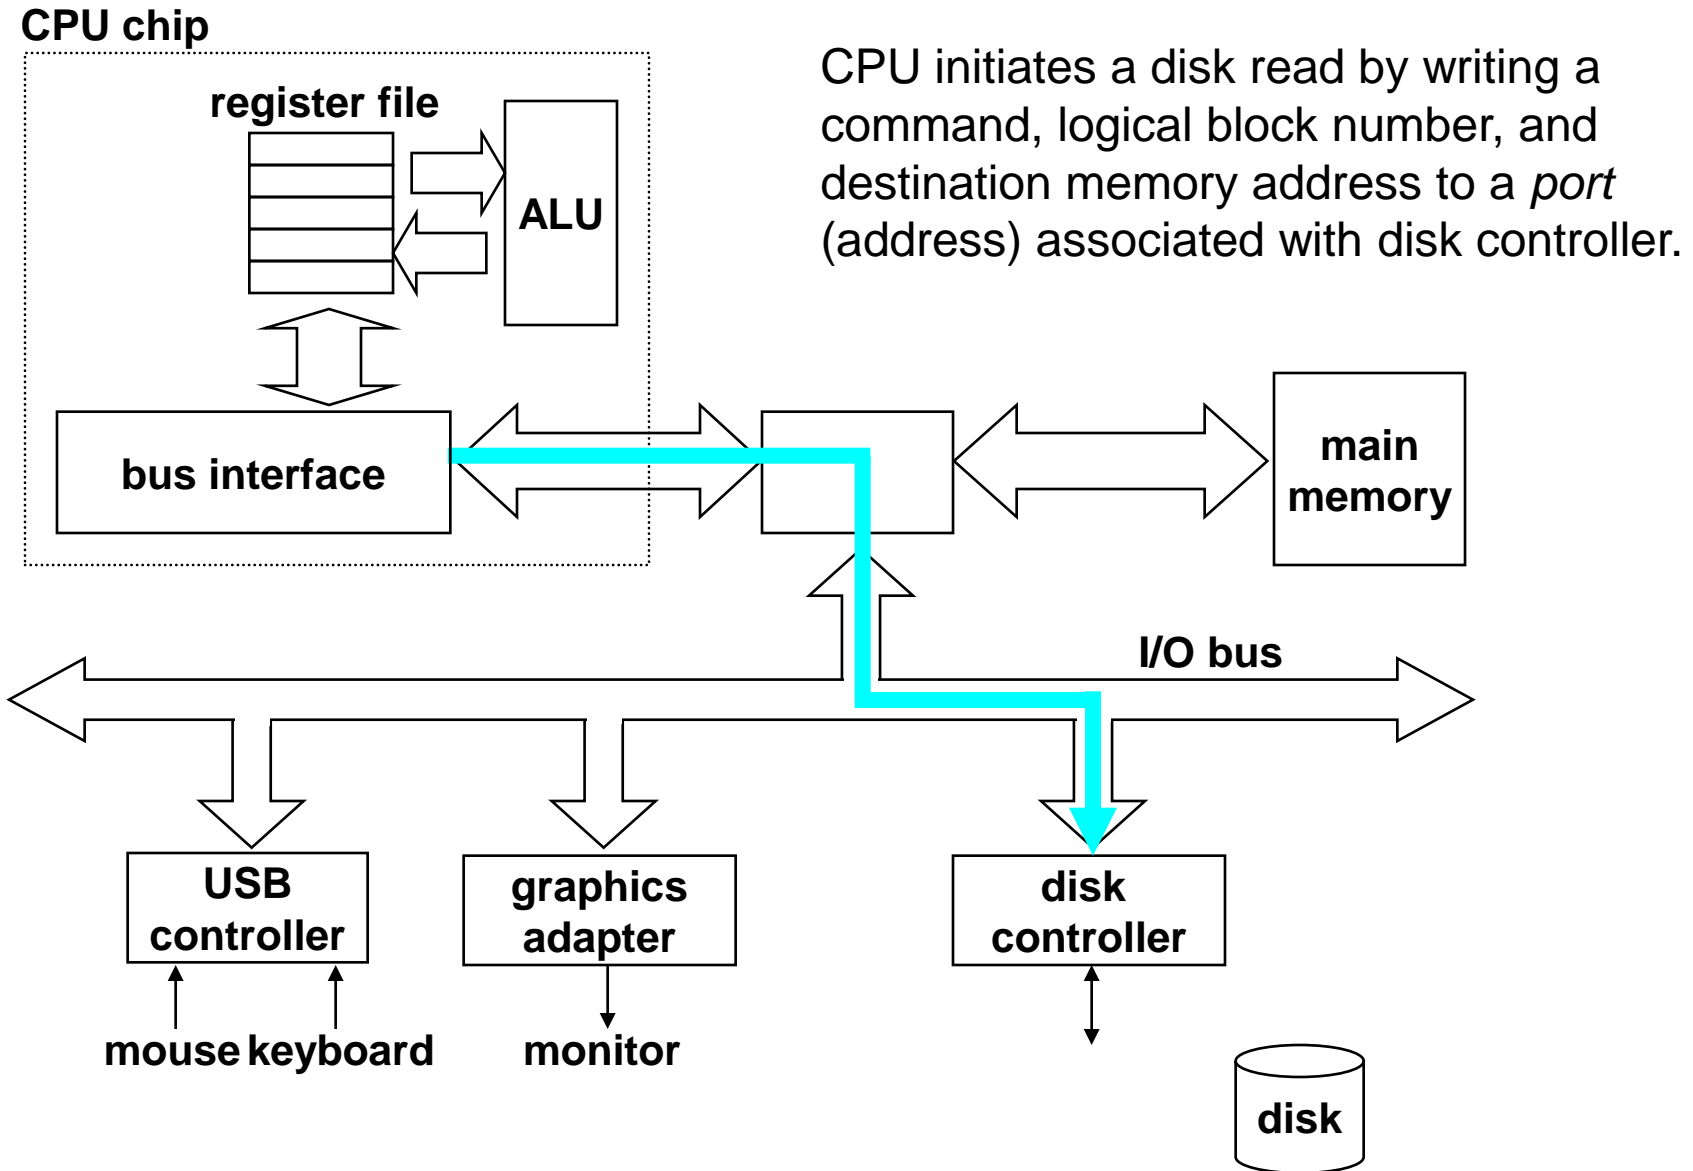

Reading a disk sector (2)

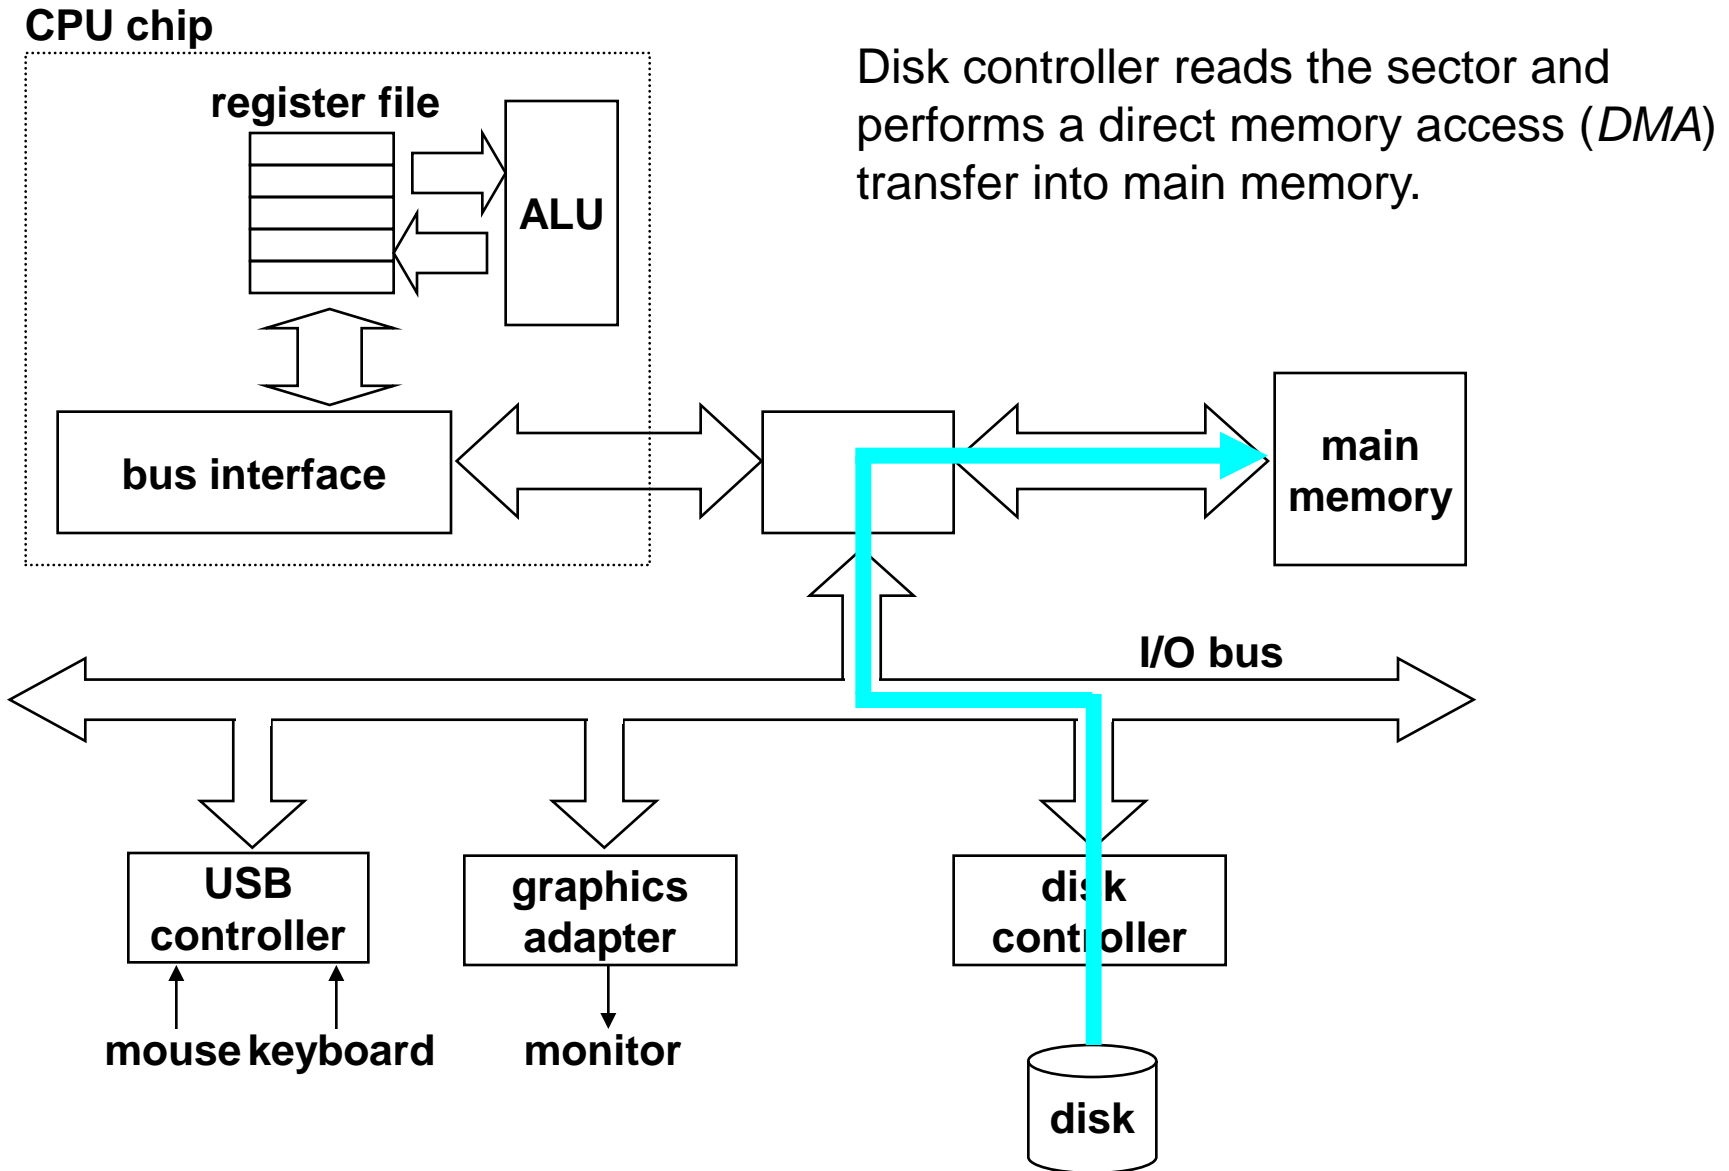

Reading a disk sector (3)

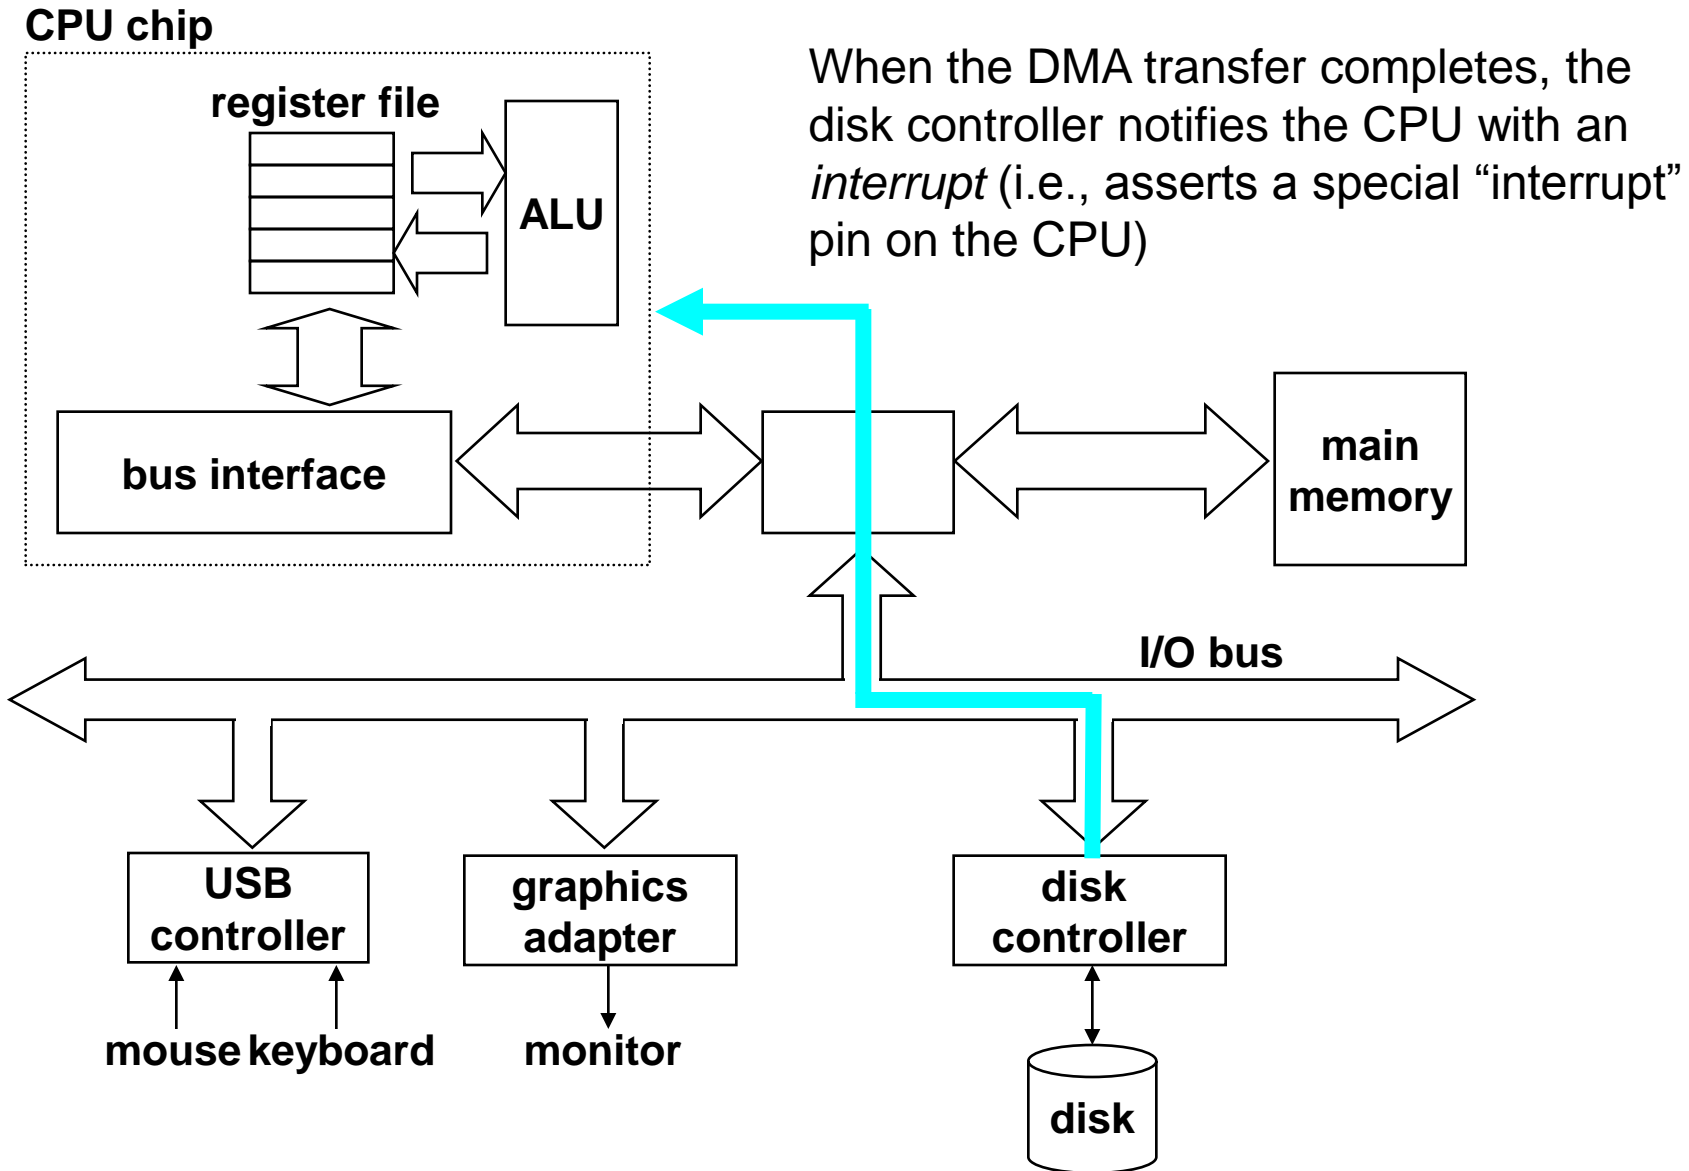

Storage trends

SRAM	Metric	1980	1985	1990	1995	2000	2005	2010	2010:1980
	\$/MB	19,200	2900	320	256	100	75	60	320
	Access (ns)	300	150	35	15	3	2	1.5	200

DRAM	Metric	1980	1985	1990	1995	2000	2005	2010	2010:1980
	\$/MB	800	880	100	30	1	.1	0.06	130,000
	Access (ns)	375	200	100	70	60	50	40	9
	Typical size (MB)	0.064	0.256	4	16	64	2000	8000	125,000

Rotating disks


Metric	1980	1985	1990	1995	2000	2005	2010	2010:1980
\$/MB	500	100	8	0.30	0.01	0.005	0.0003	1,600,000
Access (ns)	87	75	28	10	8	5	3	29
Typical size (MB)	1	10	16	1000	20,000	160,000	1,500,000	1,500,000

(Culled from back issues of Byte and PC Magazine)

CPU trends

Metric	1980	1985	1990	1995	2000	2003	2005	2010	2010:1980
Intel CPU	8080	80286	80386	Pent	P-III	Pent. 4	Core 2	Core i7	
Clock rate (MHz)	1	6	20	150	600	3300	2000	2500	2500
Cycle time (ns)	1000	166	50	6	1.6	0.30	0.50	0.4	2500
Cores	1	1	1	1	1	1	2	4	4
Eff. cycle times (ms)	1000	166	50	6	1.6	0.30	0.25	0.10	10,000

The CPU-Memory gap

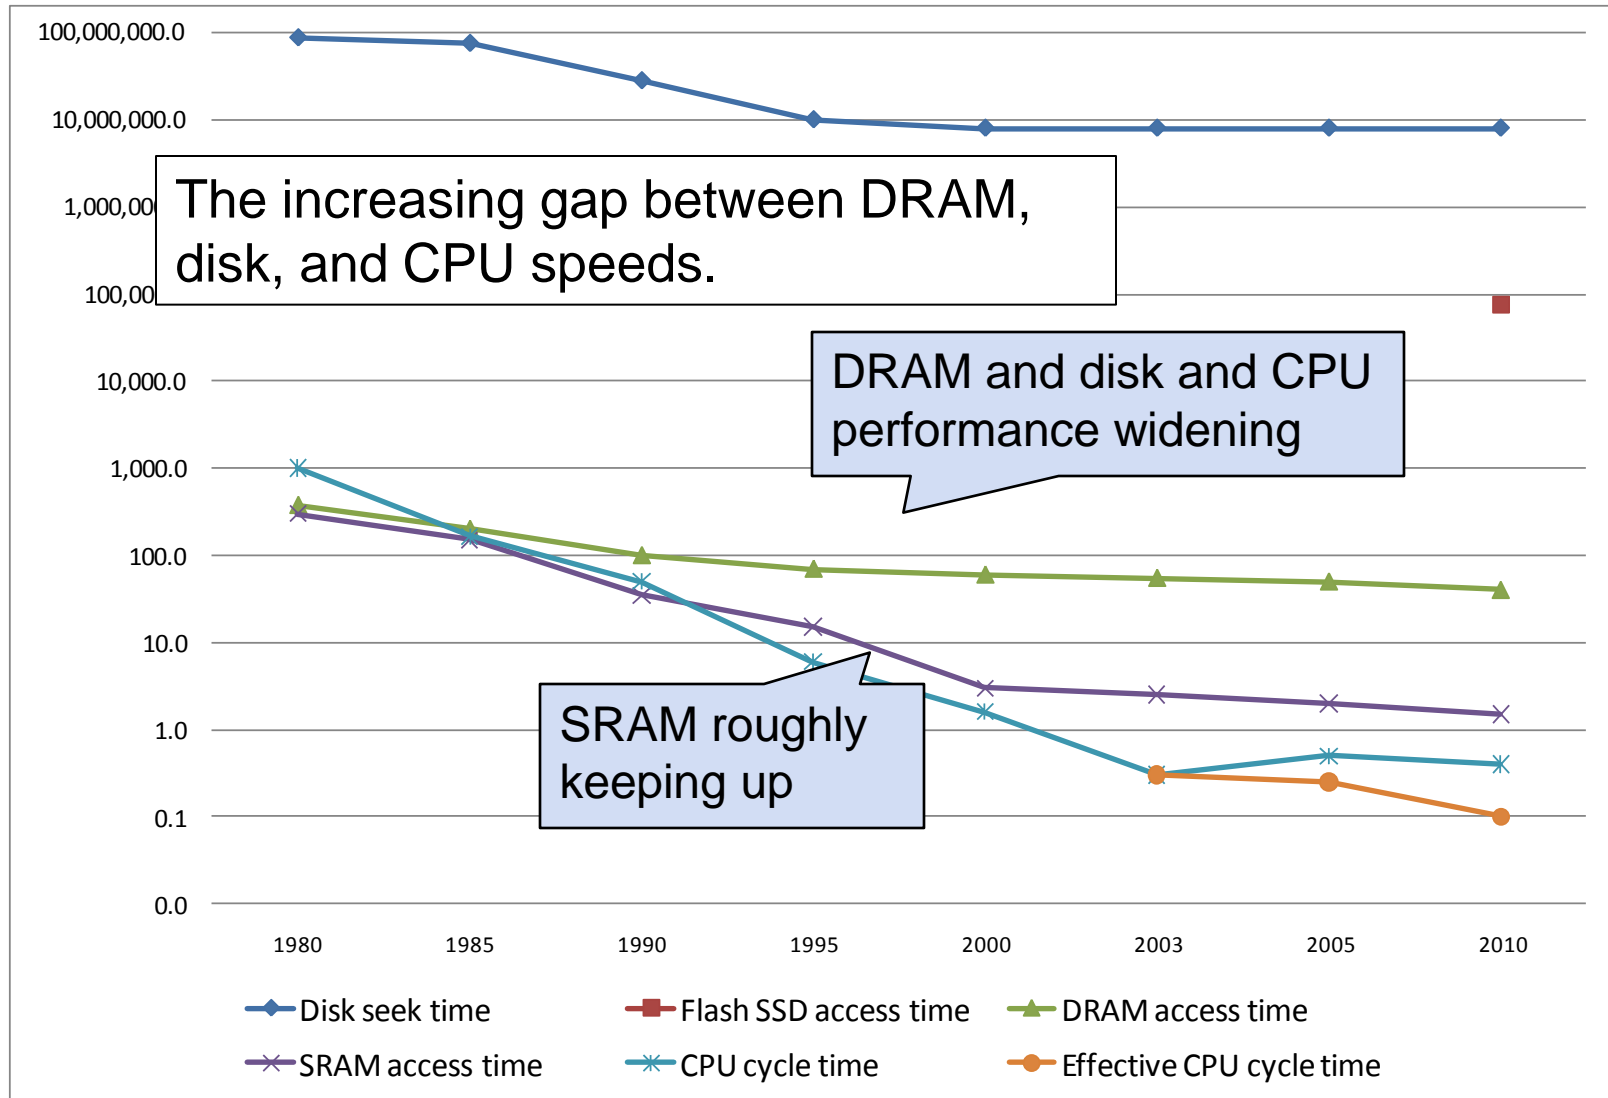

Locality

- Principle of Locality:
 - Programs tend to reuse data items near those they have used recently, or that were recently referenced themselves.
 - Temporal locality: Recently referenced items are likely to be referenced in the near future.
 - Spatial locality: Items with nearby addresses tend to be referenced close together in time.

Locality Example:

- Data
 - Reference array elements in succession (stride-1 reference pattern): **Spatial locality**
 - Reference `sum` each iteration: **Temporal locality**
- Instructions
 - Reference instructions in sequence: **Spatial locality**
 - Cycle through loop repeatedly: **Temporal locality**

```
sum = 0;
for (i = 0; i < n; i++)
    sum += a[i];
return sum;
```

Locality example

- Being able to look at code and get a qualitative sense of its locality is a key skill for a professional programmer.
- Question: Does this function have good locality?

```
int sumarrayrows(int a[M][N])
{
    int i, j, sum = 0;

    for (i = 0; i < M; i++)
        for (j = 0; j < N; j++)
            sum += a[i][j];
    return sum
}
```

- Yes! Array is accessed in same row-major order in which it is stored in memory

Locality example

- Question: Does this function have good locality?

```
int sumarraycols(int a[M][N])
{
    int i, j, sum = 0;

    for (j = 0; j < N; j++)
        for (i = 0; i < M; i++)
            sum += a[i][j];
    return sum
}
```

- No!* Scans array column-wise instead of row-wise

Locality example

- Can you permute the loops so that the function scans the 3-d array `a[]` with a stride-1 reference pattern (and thus has good spatial locality)?

```
int sumarray3d(int a[M][N][N])
{
    int i, j, k, sum = 0;

    for (i = 0; i < M; i++)
        for (j = 0; j < N; j++)
            for (k = 0; k < N; k++)
                sum += a[k][i][j];

    return sum
}
```

```
int sumarray3d(int a[M][N][N])
{
    int i, j, k, sum = 0;


    for (k = 0; k < N; k++)
        for (i = 0; i < M; i++)
            for (j = 0; j < N; j++)
                sum += a[k][i][j];

    return sum
}
```

Memory hierarchies

- Some fundamental and enduring properties of hardware and software:
 - Fast storage tech cost more per byte and have less capacity.
 - The gap between CPU and main memory speed is widening.
 - Well-written programs tend to exhibit good locality.
- These fundamental properties complement each other beautifully.
- They suggest an approach for organizing memory and storage systems known as a memory hierarchy.


An example memory hierarchy

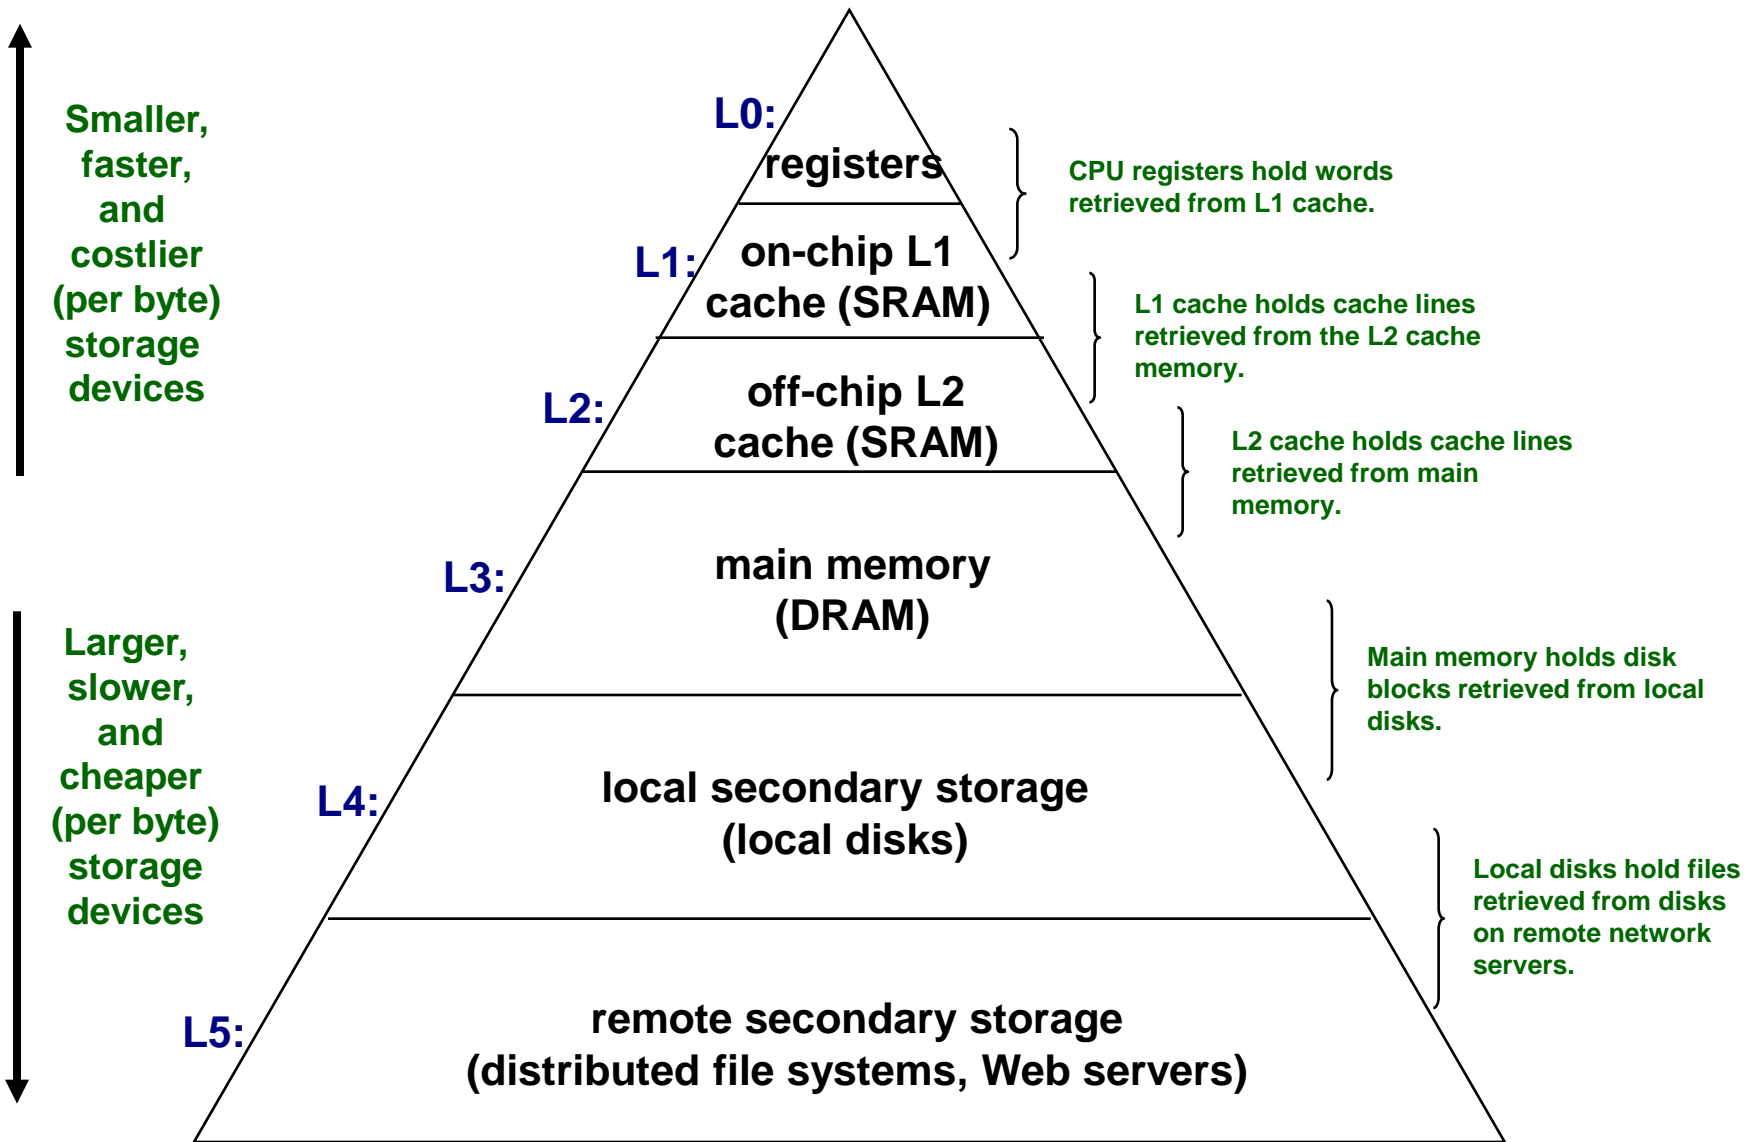


Caches

- *Cache*: A smaller, faster storage device that acts as a staging area for a subset of the data in a larger, slower device.
- Fundamental idea of a memory hierarchy:
 - For each k , the faster, smaller device at level k serves as a cache for the larger, slower device at level $k+1$.
- Why do memory hierarchies work?
 - Programs tend to access the data at level k more often than they access the data at level $k+1$.
 - Thus, the storage at level $k+1$ can be slower, and thus larger and cheaper per bit.
 - *Net effect: A large pool of memory that costs as much as the cheap storage near the bottom, but that serves data to programs at the rate of the fast storage near the top.*

Caching in a memory hierarchy

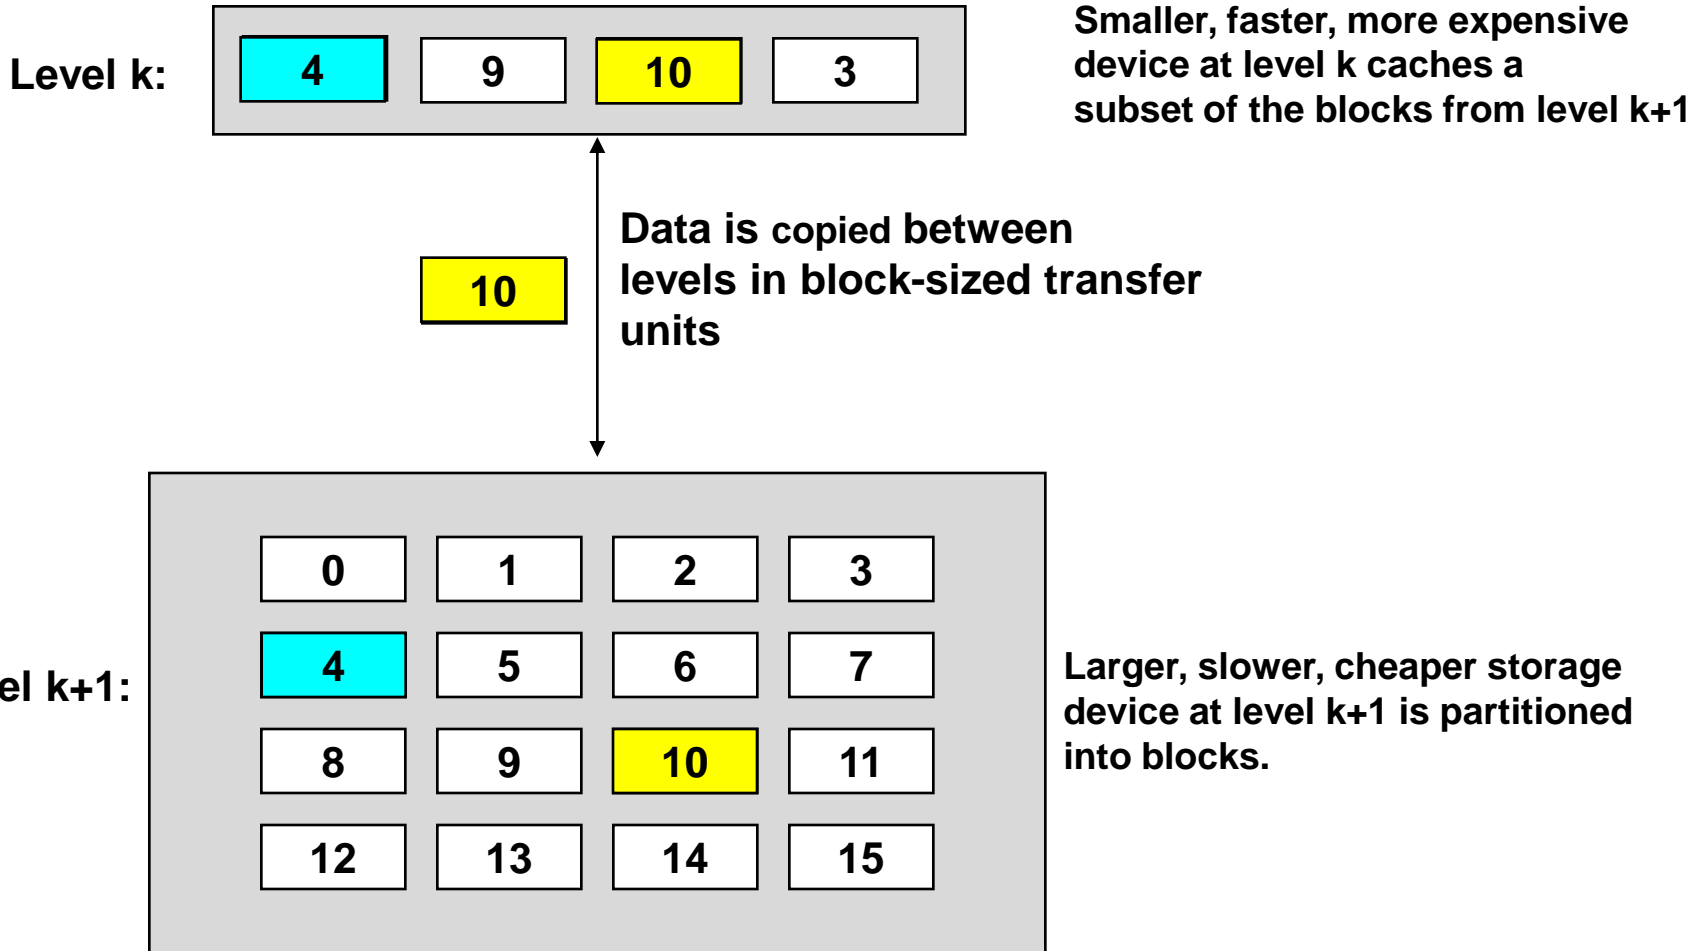

General caching concepts

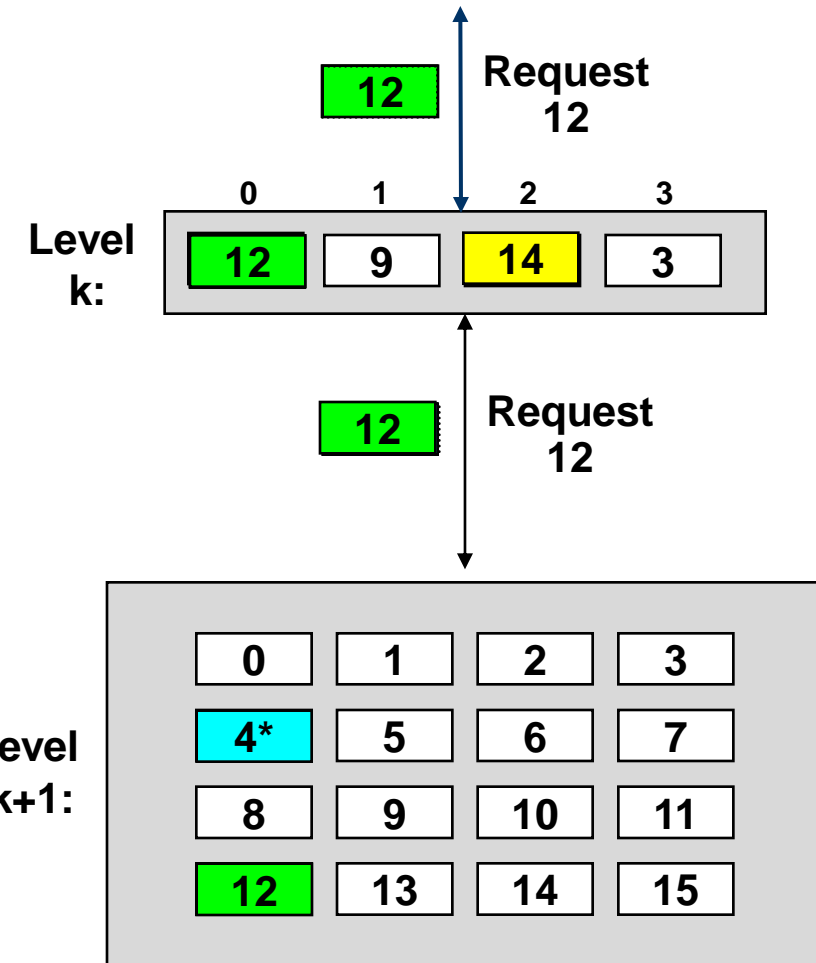

- Program needs object d , which is stored in some block b .
- Cache hit
 - Program finds b in the cache at level k . E.g., block 14.
- Cache miss
 - b is not at level k , so level k cache must fetch it from level $k+1$. E.g., block 12.
 - If level k cache is full, then some current block must be replaced (evicted). Which one is the “victim”?
 - Placement policy: where can the new block go? E.g., $b \bmod 4$
 - Replacement policy: which block should be evicted? E.g., LRU

General caching concepts

- Types of cache misses:
 - Cold (compulsary) miss
 - Cold misses occur because the cache is empty.
 - Conflict miss
 - Most caches limit blocks at level $k+1$ to a small subset (sometimes a singleton) of the block positions at level k .
 - E.g. Block i at level $k+1$ must be placed in block $(i \bmod 4)$ at level $k+1$.
 - Conflict misses occur when the level k cache is large enough, but multiple data objects all map to the same level k block.
 - E.g. Referencing blocks 0, 8, 0, 8, 0, 8, ... would miss every time.
 - Capacity miss
 - Occurs when the set of active cache blocks (working set) is larger than the cache.

Examples of caching in the hierarchy

Cache type	What cached	Where cached	Latency (cycles)	Managed by
Registers	4B word	CPU registers	0	Compiler
TLB	Address translation	On-Chip TLB	0	Hardware
L1 cache	32B block	On-chip L1	1	Hardware
L2 cache	32B block	Off-chip L2	10	Hardware
Virtual memory	4KB page	Main memory	100	Hardware+OS
Buffer cache	Parts of files	Main memory	100	OS
Network buffer cache	Parts of files	Local disks	10,000,000	AFS/NFS client
Browser cache	Web pages	Local disks	10,000,000	Web browser
Web cache	Web pages	Remote server disk	1,000,000,000	Web proxy server